



Pan Shower System

SETTINGS

- Shower Spray
- Massage
- Aeration
- Shower Spray & Massage
- Shower Spray & Aeration


Installation Instructions

To ensure satisfying performance, please read and follow these easy step by step instructions.

Pan Shower Parts




Part A

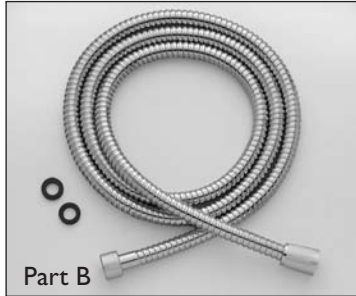

Part B



Part C

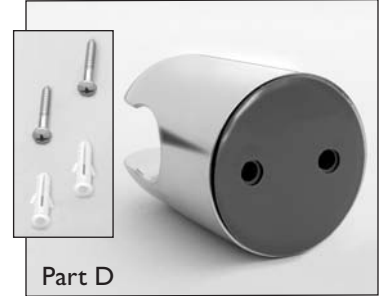

Part D

Assembly



1. All you need is a wrench OR pliers.
A phillips head screwdriver is required for Part D, should you decide not to use the glue tape.



2. Remove your existing shower head.



3. Clean the shower arm.
Lightly wrap white tape (included) around threads of the shower arm.



4. Attach Part C to shower arm.



5. Place O-rings into both openings of the hose.



6. Connect the Hose to the shower.



7. Connect the other side of the hose to part C and turn on water to check for leaks.



Part D is optional. You can install the additional bracket anywhere on the wall.

NOTES:

You can use a wrench to tighten connections at any step. • When tightening, put a rag around the shower connections to protect them.

QUESTIONS? Contact us at 201-460-8100 or www.amcorgroupusa.com

Amcor, Inc. 685-A Gotham Parkway · Carlstadt, NJ 07072